

Item No.	Part Number	Description	Quantity	Item No.	Part Number	Description	Quantity
1	QYLJ20B.1	Base Assembly	1	16	QYLJ20-2	Gasket (53*61*8)	2
2	41015	Steel Ball (6mm)	1	17★	QK5.3-15	(52.5*4.8)	1
3★	GB3452.1-82	O-Ring (6*1.8)	1	18	QK5.3-16	Snap Ring	1
4	QYL3.3W.5.1	Release Shaft	1	19★	QYL8.21A	Oil Plug	1
5	41014	Steel Ball (4mm)	1	20	QD20-12	Pin	2
6	QYL12-11	Ball Seat	1	21	QD20-19	Link Pin	1
7	QK5.3-21	Safety Valve Spring	1	22	QD20-11	Pin	1
8	QYL3.3W-7	Adjustment Screw	1	23★	QD20-6	O-Ring (6.6*3)	1
9★	QKD2.5-11	O-Ring (7.8*1.9)	1	24★	QD20-7	Gasket (7*12*1.5)	1
10	QYL10-6	Cover Screw	1	25	QYLJ16S-1	Pump Plunger	1
11	GB308-89-4.5	Steel Ball (4.5mm)	1	26	QYLA20.2	Handle Socket	1
12	QYL10-7	Nut Cap	1	27	QYLJ20S-1	Front Handle	1
13★	QYL22-10	O-Ring (45*5.3)	1	28	QYLJ20S-2	Rear Handle	1
14★	QYL22-9	Washer (56*6)	1				
15	QYLJ20S.1	Piston	1				

★ Items included in Repair Kit, Repair Kit order number: **EBJ20E-RP-0**